ARMSTRONG®

# 125KHZ RFID CARD LOCK

## PRODUCT SPECIFICATION

| | | | |
|---|---|---|---|
| Working Current | 120mA | Working Voltage | 4.5V |
| Working Temp. | 0°C ~ 40°C | Working Humidity | 20% ~ 80% |

## CARD INTRODUCTION

- **MANAGEMENT (PROGRAMMING) CARD :**
  (The authority is given by lock. The first card to program is called management card)
  To set up or delete customer card. It shall not be used to open or close a lock unless in emergency.

- **USER CARD (THE KEY OF THE LOCK) :**
  (The authority is given by the management card under the system)
  For an user to open or close the lock. Capable of storing 50 cards per lock.

## BUTTON INTRODUCTION

**BUTTON A/MODE :** Mode switch button (Short press button A/MODE to switch mode)
**BUTTON B/SET** : Set / Reset button

## MODE INTRODUCTION

- **MANUAL-CLOSE MODE ("BEEP"SOUND) :**
  Door will not lock until user card touch the sensor.
- **AUTO-CLOSE MODE ("BEEP BEEP"SOUND) :**
  Door will be locked after 6 seconds.

## LOW VOLTAGE ALARM

- When sweep the card to the sensor, and you hear two long "BEEP, BEEP" sounds, it means the lock is in low power status. **Please change to new batteries immediately.**
- Lock can still be used for about 20 times or less than 48 hours.
- The latch will keep on its current position after 20 times or 48 hours.
  *SDWS series and SDWC-507K will hold open after 20 times or 48 hours.

**⚠ WARNING :**

1. PLEASE TEST LOCK IF IT CAN WORK BEFORE CLOSING THE DOOR.
2. PLEASE USE NEW AAA ALKALINE BATTERY.
3. VOLTAGE INPUT CANNOT BE OVER THAN 6V.

20170418

ARMSTRONG®

# USER INSTRUCTION

***Please keep door open when set up/delete the card**
***Do not use management card to open/close a lock**

### SET UP A MANAGEMENT CARD

Press button B/SET for 6 seconds

"BEEP, BEEP,BEEP" and blue light on

Take a management card to touch the lock

"BEEP" and purple light on. Set up complete

### SET UP A USER CARD

Touch the lock

"BEEP" and blue light flash

Take a blank card to touch the lock

A short "BEEP" sound.The user card setup complete

### DELETE AN INDIVIDUAL USER CARD

Touch the lock

"BEEP" and blue light flash

Take a user card to touch the lock

A long "BEEP" sound.The user card is deleted

### DELETE ALL USER CARDS

Touch the lock 4 times

All user cards are deleted

### UNLOCK

Touch the lock

"BEEP" and blue light on

Unlock

### LOCK

Touch the lock

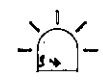
"BEEP" and red light on

Lock